


## Passenger Car Twist Link Chain Installation Instructions

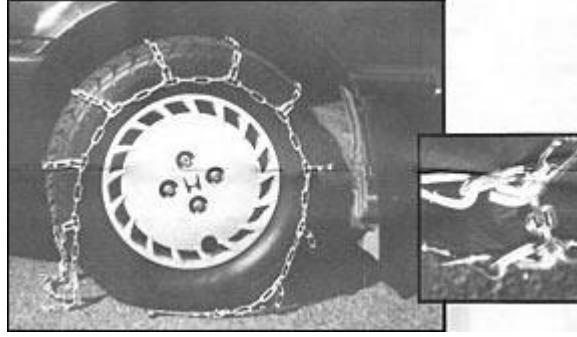


**Step 1** - Uncoil and lay chains out flat. Remove all twists and tangles.



**Step 2** - Lay chain (drape) over tire with cross chain hook ends facing out and fastener on the outside of tire.




**Step 3** - Tuck first or last cross chain under tire. Move vehicle until second cross chain has passed under tire.

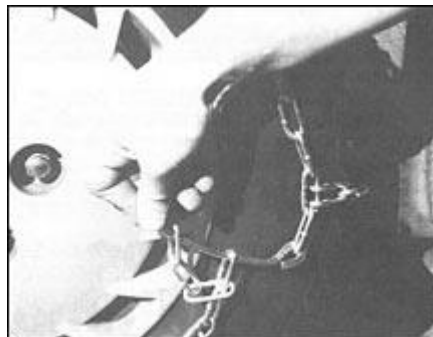

**Step 4** - Attach inside hook first. Remove slack and hook outside fastener. To install outside fasteners, pull chain tight and clip the excess links of the side chain over fastener. Close fastener by rotating it back 180 degrees and engaging the end in the side chain.



**Step 5** - Make chain as tight as possible by hand without the use of tools. Make sure chain is centered on the tire with the same number of free links on the inside and outside of the tire.

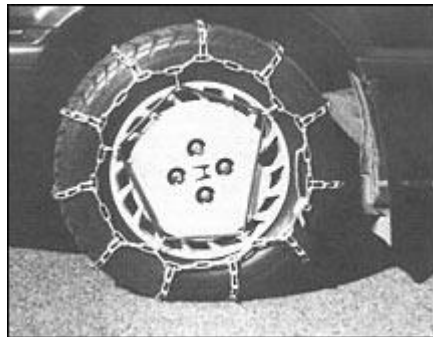

**Step 6** - Drive approximately 1/4 mile and retighten. After re-tightening rubber tire chains adjusters may be installed.