

### Installation Steps:


**1** Lay the chains out on the ground making sure the chain is not twisted in any way.



**2** Drape the chain over the tire. The chain should be centered on the tire, the cross-chain hooks should be curved away from the tire and the side chain with the "quick hook" should be located on the inside of the tire.



**3** Tuck the leading end of the chain under the front of the tire.

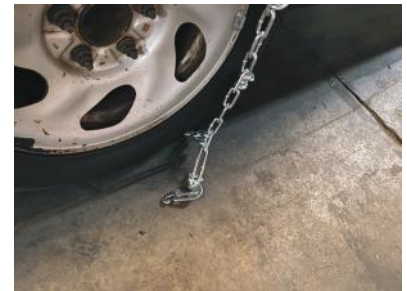

**4** Drive forward until the leading end of the chain is behind the tire.




### Installation Steps:

**5** Connect the ends of the chain on the inside of the tire first by hooking the "quick hook" to the opposite end the chain as far as possible.




**6** Connect the outside ends the chain together by sticking the outside retaining hook through the side chain on the opposite end of the chains so that the chain is as tight as possible.

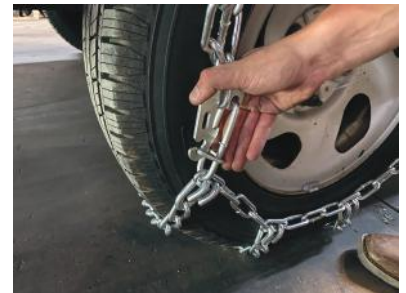

**7** Fold the retaining hook back and secure with the hook collar. The chain should be centered on the tire and the cross chains should go straight across the tread of the tire.



**8** Secure or remove any excess side chain. If the excess is removed, it is recommended that you leave several side-chain links to make the installation process easier in the future.

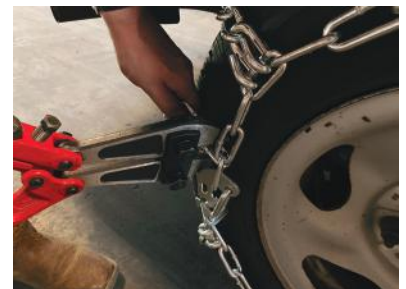


### Installation Steps:

**9** Drive approximately 1/4 mile. Stop and check the chains to make sure there is still a tight fit. Tighten if necessary.



**10** Install chain tensioners. The use of tensioners is recommended to help maintain a tight fit, giving better traction and longer life to the chain.

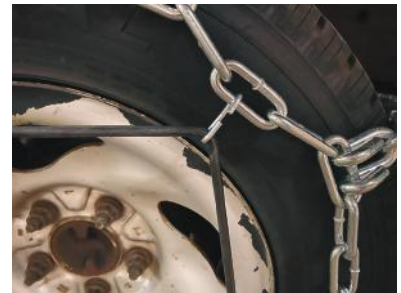

**11** Enjoy your chains.

